

Accessories use tips

 
Placing accessories on the correct level will achieve better cooking performance. See the recipes on the online control guide.

Accessory	Functions	Level
	☒ Air fry	1
	☒ Dehydrate	1
	☒ Toast	0 / 1
	☒ Bake	0 / 1
	☒ Broil	0 / 1 / 2
	☒ Air baking	1
	☒ Roast	1
	☒ Broil	0 / 1 / 2
	☒ Bake	0 / 1

Level:



Hot Chaude



Niveau:



IMPORTANT: Do not use included accessories or other metal cookware during microwave functions, such as reheat, defrost, soften, melt, keep warm and cook.

IMPORTANT : Ne pas utiliser les accessoires inclus ou d'autres ustensiles de cuisine en métal pendant les fonctions d'utilisation du micro-ondes, comme le réchauffage, la décongélation, faire ramollir, faire fondre, le maintien au chaud et la cuisson.

* When cooking oily or juicy foods, place an oven-proof baking plate on the oven bottom to catch drippings.

Conseils d'utilisation des accessoires

Placer les accessoires au bon niveau pour obtenir les meilleures performances de cuisson. Voir les recettes sur le guide des commandes en ligne.

Accessoire	Fonction	Niveau
	☒ Friture à l'air	1
	☒ Déshydrater	1
	☒ Rôtir	0 / 1
	☒ Cuisson au four	0 / 1
	☒ Cuisson au grill	0 / 1 / 2
	☒ Cuisson à l'air	1
	☒ Rôtissage	1
	☒ Cuisson au grill	0 / 1 / 2
	☒ Cuisson au four	0 / 1

* Pour la cuisson d'aliments gras ou juteux, placer une plaque de cuisson résistante au four sur le fond du four pour récupérer les gouttes.

P/N : W11582318B