

# CHEST FREEZER QUICK START GUIDE

## OPERATING INSTRUCTIONS

### WARNING:

■ To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

### IMPORTANT:


- Before connecting the appliance to a power source, let it stand upright for approximately 6 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Before operating this appliance, make sure it has been properly installed according to the appliance's Owner's Manual.

## USER INTERFACE

### IMPORTANT:

- Wait 24 hours for your refrigerator to cool completely before adding food. If you add food before the refrigerator has cooled completely, your food may spoil.
- The recommended settings should be correct for normal household refrigerator use. The controls are set correctly when milk or juice is as cold as you like and when ice cream is firm.
- When the power is on, the temperature display shows the set point temperature of the compartment.  
**NOTE:** Adjusting the refrigerator and freezer controls to a colder than recommended setting will not cool the compartments any faster.
- If the temperature is too warm or too cold in the refrigerator or freezer, first check the air vents to be sure they are not blocked before adjusting the controls.

## Temperature Setting

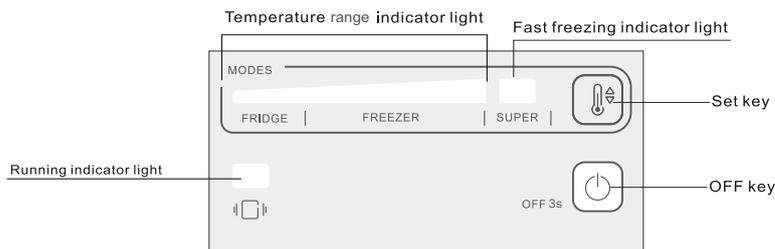

### The current is switched on

All LED lamps light on 1 second when the current is switched on, then running on the original setting mode before switched off .

### The temperature setting

Press 'SET' key to adjust the temperature. Press once, temperature range LED indicator will be light on. It can be cycling setting, after 5 seconds , the electronic thermostat can confirm the settings automatically.

When all temperature range LED indicators are light on, press the 'SET' key, the SUPER LED indicator will be light on, after 5 seconds, the fast freezing mode can be confirmed automatically. Press 'SET' key again, the SUPER LED indicator will light off, then turn to the Fridge mode.

### The recommendations of the users setting

  Fridge mode recommendation

  Freezer mode recommendation

  Fast freezing mode

### LED indicator status:

Temperature range LED indicator (Blue color): Fridge range (1,2 level)  
 Freezer range (3,4,5,6,7 level)

**Fast Freezing LED indicator (Blue color):** On Fast freezing mode, LED light on  
 Turn off Fast freezing mode, LED light off

**Running LED indicator (Green color):** Compressor running, LED light on;  
 Compressor stopped, LED light off ;

**After each operation is finished for 30 minutes ,LED indicator will light slightly.**

**Power Off Memory Function:** the power of chest freezer is switched on again , it will automatically run according to the mode setting before the power off .

**OFF 3' S :** the power of chest freezer is switched off after press OFF 3's key 3 seconds.

Cb]bY CfXYf]b[ ' bZ:fa Ujcb

: cf XYfU]YX ]bgU' Ujcb ]bgfU' Vjcb' UbX' a U]bYbUbW' ]bZ:fa UjcbZk ]bYf' grefU[ YZ UbX' fU]bgdcfU]jcb' ]dgZ' dYUgY' gYY' h.Y' Ck bYffg

A Ubi U' ]bW' XYX' k ]h' nci' f Udd' ]UbW''

: cf ]bZ:fa Ujcb' cb' UbmcZ h.Y' Z' ck ]b[ ]Y'a gZ' U' Z' '' V'W'W' ei ]XYZ' k UffU]bna' XYfU]YX' d'fcXi VhX]a Ybg]cbgZ' cf Z'cf Vta' d'YfY' ]bgfU' Vjcbg' Z'cf

i' gY' UbX' ]bgU' UjcbZ' d'YUgY' ]g]h' h'hdg' ##k k k "k \ ]f]d'cc' "Vta' #ck bYfgZ' cf ]b' 7 UbUXU' \ h'hdg' ##k k k "k \ ]f]d'cc' "Vta' #ck bYfg" h\ ]g' a Um

gUj' Y' nci' h.Y' V'g'hcZU' gYfj ]W' W' <ck Yj YfZ ]Z' nci' bYYX' h: V'zbU]W' gZ' i' gY' h.Y' ]bZ:fa Ujcb' ]gYX' W' ck' Z'cf h.Y' Udcf'cfU]Y' fY[ ]cb"

United States:  
**1-800-253-1301**

Whirlpool Brand Home Appliances  
 Customer eXperience Center  
 553 Benson Road  
 Benton Harbor, MI 49022-2692

Canada:  
**1-800-807-6777**

Whirlpool Brand Home Appliances  
 Customer eXperience Centre  
 200-6750 Century Ave.  
 Mississauga, Ontario L5N 0B7