 


KitchenAid®

Hand Mixer
KHM9218Q

PARTS AND FEATURES

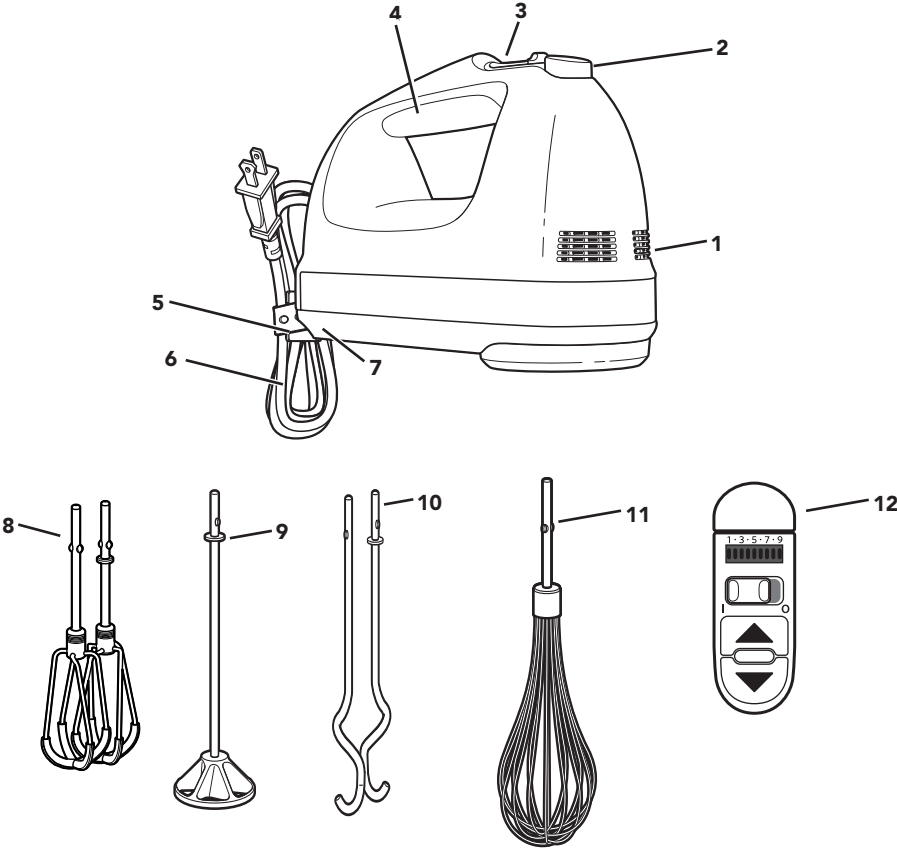

- | | | | |
|---|---------------------------------|----|------------------------------|
| 1 | Air Vents | 7 | Non-tip Heel Rest |
| 2 | Oversized Beater Ejector Button | 8 | Flex Edge Beater |
| 3 | Digital Speed Control | 9 | Liquid Blender Rod Accessory |
| 4 | Soft Grip Handle | 10 | Dough Hooks Accessory |
| 5 | Cord Strap | 11 | 16-tine Pro Whisk Accessory |
| 6 | Swivel Lock Power Cord | 12 | 9 - Speed Control |

PRODUCT SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against the risk of electrical shock do not put Hand Mixer in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are closely supervised and instructed concerning the use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
5. Avoid contacting moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beater during operation to reduce the risk of injury to persons and/or damage to the Hand Mixer.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Facility for examination, repair, or electrical or mechanical adjustment
7. The use of accessories or attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use the appliance outdoors.
9. Do not let the cord hang over the edge of table or counter.

PRODUCT SAFETY

10. Do not let cord contact hot surface, including the stove.
11. Remove any accessories from the Hand Mixer before washing.
12. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.

SAVE THESE INSTRUCTIONS

This product is designed for household use only.

ELECTRICAL REQUIREMENTS

Voltage: 120 V~

Frequency: 60 Hz

NOTE: This Hand Mixer has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

SPEED CONTROL GUIDE

First, clean all parts and accessories (see “Care and Cleaning” section).

IMPORTANT: Hand Mixer should always be set on the lowest speed to start mixing. Move to higher speeds as needed. the speed setting indicator control will light up with the corresponding number for each speed.

Speed	Attachment	9 - Speed Hand Mixer
1	Flex Edge Beater (8)	For slow stirring, combining, and starting all mixing procedures. Use this speed to stir in nuts, chocolate chips, shredded cheese, onions, olives, and other chunky ingredients. Helps prevent ingredients from splashing out of bowl.
2	Flex Edge Beater (8) Dough Hook (10)	Mix flour and other dry ingredients with liquids or other moist mixtures.
3	Flex Edge Beater (8)	Mix pancake batter.
4		Combine heavy mixtures, such as cookie dough. Mix light cream cheese spreads. Stir batters and gelatin mixtures.
5		Mix muffins and quick breads. Combine heavy cream cheese mixtures. Mash potatoes or squash.
6	Flex Edge Beater (8) Dough Hook (10)	Mix batter breads. Blend butter and sugar. Mix frostings.
7	Flex Edge Beater (8)	Finish mixing cake and other batters.
8	16-tine Whisk (11)	Beat egg whites. Whip heavy cream and mousse mixtures.
9	Liquid Blender Rod (9)	Beat meringue mixtures.

NOTE: Beater accessories are not designed for mixing and kneading bread dough. Use the dough hook attachments included with the Hand Mixer.

PRODUCT ASSEMBLY

ATTACHING THE ACCESSORIES

! WARNING

 
Injury Hazard

Unplug mixer before touching beaters.


Failure to do so can result in broken bones, cuts, or bruises.

IMPORTANT: Read and follow the specific instructions in this manual for proper use of the Hand Mixer.

1

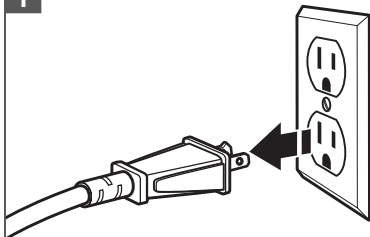


 Before attaching any accessories, unplug the Hand Mixer from the electrical outlet.

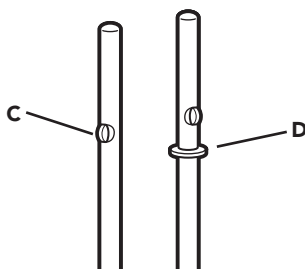


Paired accessories (Beaters, Optional Dough Hooks) include one accessory with a collar (D) and one without (C). The single accessory comes with a collar (D) (Liquid Blending Rod) or without (C) (Whisk).

 2

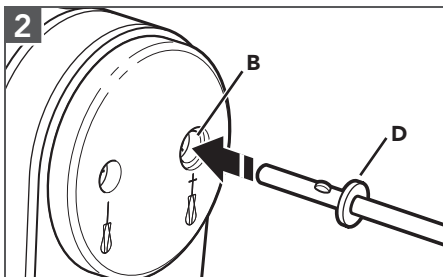

Insert the accessory shaft with the collar (D) into the larger opening (B) of the hand mixer. Align the flanges on the shaft with the slots in the opening. Push to lock into place.

 3


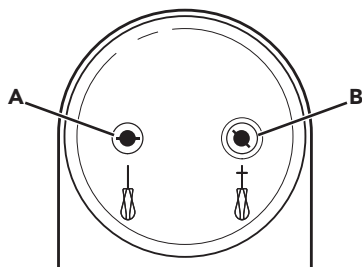


Insert the accessory without a collar (C) into the smaller opening (A). Align and push to lock into place.

NOTE: An accessory shaft without a collar may be used in either opening (A or B). Those with a collar may only be used in the larger opening (B).

PRODUCT ASSEMBLY

  REMOVING THE ACCESSORIES

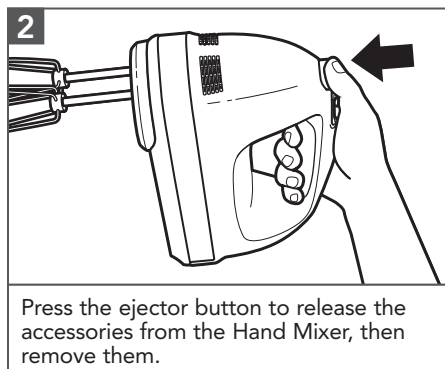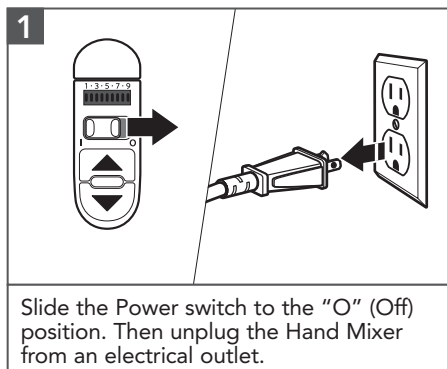

PRODUCT USAGE

OPERATING THE SPEED CONTROL

⚠ WARNING

 
 
Injury Hazard

Unplug mixer before touching beaters.

Failure to do so can result in broken bones, cuts, or bruises.


This KitchenAid® Hand Mixer will beat faster and more thoroughly than most other electric hand mixers. Therefore, the beating time in most recipes must be adjusted to avoid over beating. Beating time is faster due to larger beater sizes.

To help determine the ideal beating time, observe the batter or dough and beat only until it has the desired appearance described in your recipe, such as "smooth and creamy". To select the best beating speeds, use the "Speed Control Guide" section.

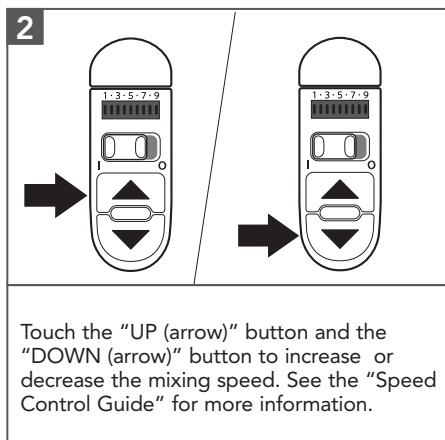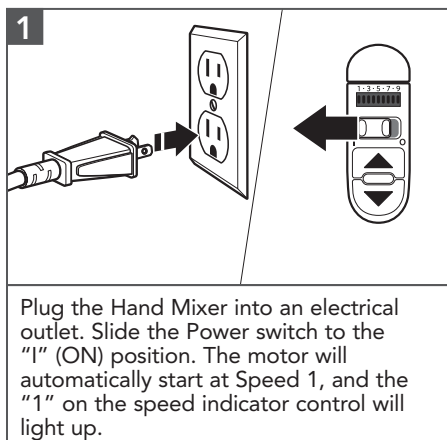

PRODUCT USAGE

 3

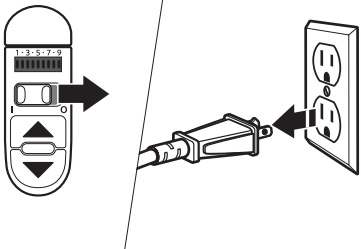

When finished, slide the Power switch to the “O” (Off) position. Then unplug the Hand Mixer from an electrical outlet.

CARE AND CLEANING

IMPORTANT: Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance. Do not immerse the Hand Mixer body in water or other liquids. Do not use abrasive cleansers or scouring pads to avoid scratching.

**WARNING**



Electrical Shock Hazard

Do not put in water.

Doing so can result in death or electrical shock.

 
**WARNING**

Injury Hazard

Unplug mixer before touching beaters.


Failure to do so can result in broken bones, cuts, or bruises.

1

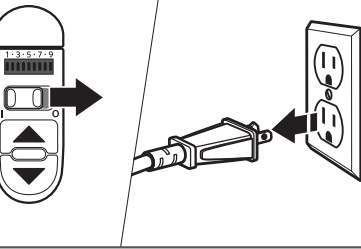

Slide the Power switch to the “O” (Off) position. Then unplug the Hand Mixer from an electrical outlet.

 
2

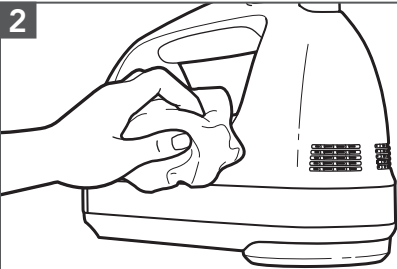

Wipe the Hand Mixer body with a soft, damp cloth.

CARE AND CLEANING

 3

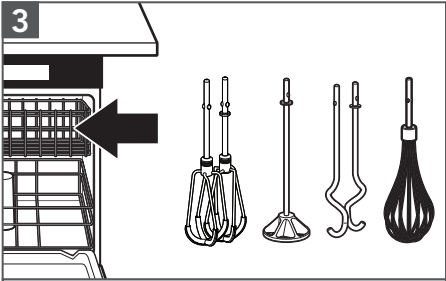

The following parts are dishwasher-safe, top rack only: Flex Edge Beater*, 16-Tine Pro Whisk*, Dough Hooks* and Liquid Blender Rod*.

TROUBLESHOOTING GUIDE

Problem	Solution
If the Hand Mixer fails to start:	Check if the Hand Mixer is securely plugged into an outlet.
	If you have a circuit breaker box, make sure the circuit is closed.
If the problem cannot be fixed	Then contact KitchenAid or an Authorized Service Center**.

Note: If the problem cannot be corrected, See the “Warranty and Service” section. Do not return the Hand Mixer to the retailer; retailers do not provide service.

*These parts can also be washed by hand in warm, soapy water and dry thoroughly.

****USA/Puerto Rico:** 1-800-541-6390,
Canada: 1-800-807-6777,
Mexico: 01-800-024-17-17
(JV Distribuciones)
or
01-800-902-31-00
(Industrias Birtman)

WARRANTY AND SERVICE

KITCHENAID® HAND MIXER WARRANTY FOR THE 50 UNITED STATES, THE DISTRICT OF COLUMBIA, PUERTO RICO, AND CANADA

This warranty extends to the purchaser and any succeeding owner for Hand Mixers operated in the 50 United States, the District of Columbia, Puerto Rico, and Canada.

Length of Warranty:	One Year Full Warranty from date of purchase.
KitchenAid Will Pay for Your Choice of: 	Hassle-Free Replacement of your Hand Mixer. See the next page for details on how to arrange for service, or call the Customer eXperience Center toll-free at 1-800-541-6390 . OR The replacement parts and repair labor costs to correct defects in materials and workmanship. Service must be provided by an Authorized KitchenAid Service Center.
KitchenAid Will Not Pay for:	A. Repairs when your Hand Mixer is used in other than normal single family home use. B. Damage resulting from accident, alteration, misuse or abuse. C. Any shipping or handling costs to deliver your Hand Mixer to an Authorized Service Center. D. Replacement parts or repair labor costs for Hand Mixer attachments operated outside the 50 United States, District of Columbia, Puerto Rico, and Canada.
DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES IMPLIED WARRANTIES, INCLUDING TO THE EXTENT APPLICABLE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED TO THE EXTENT LEGALLY PERMISSIBLE. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO ONE YEAR, OR THE SHORTEST PERIOD ALLOWED BY LAW. SOME STATES AND PROVINCES DO NOT ALLOW LIMITATIONS OR EXCLUSIONS ON HOW LONG AN IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. IF THIS PRODUCT FAILS TO WORK AS WARRANTED, CUSTOMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE REPAIR OR REPLACEMENT ACCORDING TO THE TERMS OF THIS LIMITED WARRANTY. KITCHENAID AND KITCHENAID CANADA DO NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.	

WARRANTY AND SERVICE

HASSLE-FREE REPLACEMENT WARRANTY—50 UNITED STATES, DISTRICT OF COLUMBIA, AND PUERTO RICO

We're so confident the quality of our products meets the exacting standards of KitchenAid that, if your Hand Mixer should fail within the first year of ownership, KitchenAid will arrange to deliver an identical or comparable replacement to your door free of charge and arrange to have your original Hand Mixer returned to us. Your replacement unit will also be covered by our one year limited warranty.

If your Hand Mixer should fail within the first year of ownership, simply call our

toll-free Customer eXperience Center at **1-800-541-6390** Monday through Friday. Please have your original sales receipt available when you call. Proof of purchase will be required to initiate the claim. Give the consultant your complete shipping address (no P.O. Box numbers, please).

When you receive your replacement Hand Mixer, use the carton, packing materials, and prepaid shipping label to pack up your original Hand Mixer and send it back to KitchenAid.

HASSLE-FREE REPLACEMENT WARRANTY—CANADA

We're so confident the quality of our products meets the exacting standards of the KitchenAid brand that, if your Hand Mixer should fail within the first year of ownership, we will replace your Hand Mixer with an identical or comparable replacement. Your replacement unit will also be covered by our one year limited warranty.

If your Hand Mixer should fail within the first year of ownership, simply call our toll-free Customer eXperience Center

at **1-800-807-6777** Monday through Friday. Please have your original sales receipt available when you call. Proof of purchase will be required to initiate the claim. Give the consultant your complete shipping address.

When you receive your replacement Hand Mixer, use the carton, packing materials, and prepaid shipping label to pack up your original Hand Mixer and send it back to KitchenAid.

ARRANGING FOR SERVICE AFTER THE WARRANTY EXPIRES, OR ORDERING ACCESSORIES AND REPLACEMENT PARTS

In the United States and Puerto Rico:

For service information, or to order accessories or replacement parts, call toll-free at **1-800-541-6390** or write to:

Customer eXperience Center,
KitchenAid Small Appliances,
P.O. Box 218, St. Joseph, MI 49085-0218

Outside the United States and Puerto Rico:

Consult your local KitchenAid dealer or the store where you purchased the Hand Mixer for information on how to obtain service.

For service information in Canada:

Call toll-free **1-800-807-6777**.

For service information in Mexico:

Call toll-free **01-800-0022-767**.

**DISCOVER MORE. DÉCOUVREZ PLUS. DESCUBRA MÁS.
KITCHENAID.COM/QUICKSTART**



PRODUCT QUESTIONS OR RETURNS

QUESTIONS SUR LE PRODUIT OU LES RETOURS

PREGUNTAS SOBRE EL PRODUCTO O DEVOLUCIONES

USA: 1.800.541.6390 | KitchenAid.com

CANADA: 1.800.807.6777 | KitchenAid.ca

MEXICO: KitchenAid.com.mx

LATIN AMERICA: KitchenAid-Latam.com



KitchenAid®

®/™ ©2022 KitchenAid. All rights reserved. KITCHENAID and the design of the stand mixer are trademarks in the U.S. and elsewhere. Used under license in Canada.