


BOOST STAIN FIGHTING (ON SELECTED CYCLES)

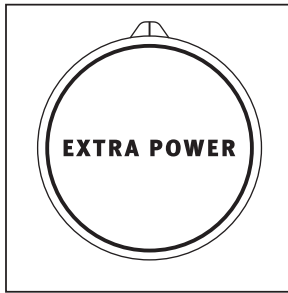

EXTRA POWER Option

- Press the knob to select EXTRA POWER.
- When Extra Power is active the cycle control knob will illuminate.
- Extra Power will increase cleaning power in the cycle selected.

TOP LOAD WASHER CYCLE GUIDE

Settings shown are selectable for that cycle. Factory default settings are shown in Bold. Once you select a cycle, the default modifiers or the previous set modifiers for that cycle will be shown in the Display LCD. For best fabric care, choose the cycle that best fits the load being washed. Not all cycles and options are available on all models. Please refer to garment label instructions for best care.

Items to wash:	Cycle:	Temperature*:	Soil Level:	Spin Speed:	Water Level:	Cycle Details:
Overly soiled garments, items that need additional cleaning effort	Heavy Duty	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill Auto High Auto Med Auto	Use this cycle for heavily soiled or sturdy items. Water Level Sensing process may take longer for some items than others because they will absorb more water than other fabric types.
Bright or darkly colored, casual and mixed loads	Colors	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill Auto High Auto Med Auto	Use this cycle to wash darks and colors, including mixed loads and active wear.
Large items such as sheets, sleeping bags, small comforters, jackets, small washable rugs	Bulky Items	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill	Use this cycle to wash large items such as jackets and small comforters. The washer will fill with enough water to wet down the load before the wash portion of the cycle begins, and uses a higher water level than other cycles.
Heavily soiled, colorfast fabrics	Sanitize	Hot	Extra Heavy	Fast Medium	Max Fill Auto High Auto Med Auto	Use this cycle to eliminate 99.9% of bacteria when used in conjunction with Oxi additives. Preset cycle settings must be used to achieve proper sanitization. Be sure to add an Oxi product to the basket before starting cycle.
Swimsuits and items requiring rinsing without detergent	Drain & Spin	N/A	N/A	Fast Medium Off	Auto	Combines a high speed spin with the option of a rinse only cycle for loads requiring an additional spin-out to reduce drying times or an additional rinse cycle to refresh a load or complete a cycle after power interruption. If you wish to run only the Drain & Spin Cycle, select the DRAIN & SPIN cycle. If you wish to run a Rinse & Spin, select the DRAIN & SPIN cycle, and then select EXTRA RINSE.
Cottons, linens, and mixed garment loads	Normal/Regular	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Off	Auto High Auto Med Auto	Use this cycle for normally soiled cottons and mixed fabric loads.
Machine-wash silks, handwash fabrics	Delicates	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill Auto High Auto Med Auto	Use this cycle to wash lightly soiled items indicating "Machine Washable Silks" or "Gentle" cycle on the care label. Place small items in mesh garment bags before washing. This cycle uses a higher pre-set water level.

*All rinses are cold.

TOP LOAD WASHER CYCLE GUIDE (cont.)

Settings shown are selectable for that cycle. Factory default settings are shown in Bold. Once you select a cycle, the default modifiers or the previous set modifiers for that cycle will be shown in the Display LCD. For best fabric care, choose the cycle that best fits the load being washed. Not all cycles and options are available on all models. Please refer to garment label instructions for best care.

Items to wash:	Cycle:	Temperature*:	Soil Level:	Spin Speed:	Water Level:	Cycle Details:
Lightly soiled, small-sized mixed garment loads	Quick Wash	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill Auto High Auto Med Auto	Use this cycle to quickly wash lightly soiled garments and small loads. The Quick Wash cycle uses shorter periods of more intense washing to clean items quickly.
No clothes in washer	Clean Washer	N/A	N/A	N/A	N/A	Use this cycle every 30 washes to keep the inside of your washer fresh and clean. This cycle uses a higher water level. Use with affresh® Washer Cleaner tablet or liquid chlorine bleach to thoroughly clean the inside of your washer. This cycle should not be interrupted. See "Washer Care". IMPORTANT: Do not place garments or other items in the washer during the Clean Washer cycle. Use this cycle with an empty basket.
Towels, jeans, casual, and mixed loads. Sturdy fabrics	Towels	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill Auto High Auto Med Auto	Provides additional water and alternating wash action for heavily soiled mixed loads.
Heavily soiled white fabrics	Whites	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill Auto High Auto Med Auto	This cycle, when used with chlorine bleach, improves whitening of soiled white fabrics.

*All rinses are cold.

NOTE: Normal cycle is recommended for washing normally soiled cotton or linen clothes. This clothes washer's government energy certification was based on the Normal cycle with all wash temperature selections and water fill levels offered in the cycle. It was tested as a User Adjustable Automatic Water Fill Control System clothes washer. The settings as shipped are Normal cycle, Warm wash and Deep Fill OFF.

WASHER ICONS



























Image	Description	Status
	Door Locked	Alert State
	Remote Enable	On
	Delay Start	On
	Deep Fill	On - Auto
		On - Auto Medium
		On - Auto High
		On - Max Fill
	Fabric Softener	On
	Extra Rinse	On
	Smartgrid, Peak rates in effect	On
		Smart Delay
		Smart Pause
	WiFi Status Indicator Note: When the WiFi is disconnected, the priority goes to the first, then as other options added, it goes to the least again.	Connected
		Disconnected

Image	Description	Status
	Fabric Softener	Off
	Extra Rinse	Off
	Custom Cycle	
	Download & Go Cycle	
	Cycle Signal	Off
		Low
		Medium
		High
	Clean Washer	
	Remote Enable	Off
	Faucet	On
		Off

NOTE: Not all features and options are available on all models.