

CHEST FREEZER QUICK START GUIDE

OPERATING INSTRUCTIONS

WARNING:

■ To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

IMPORTANT:

■ Before connecting the appliance to a power source, let it stand upright for approximately 6 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.


■ Before operating this appliance, make sure it has been properly installed according to the appliance's Owner's Manual.

USER INTERFACE

IMPORTANT:

- Wait 24 hours for your refrigerator to cool completely before adding food. If you add food before the refrigerator has cooled completely, your food may spoil.
- The recommended settings should be correct for normal household refrigerator use. The controls are set correctly when milk or juice is as cold as you like and when ice cream is firm.
- When the power is on, the temperature display shows the set point temperature of the compartment.
NOTE: Adjusting the refrigerator and freezer controls to a colder than recommended setting will not cool the compartments any faster.
- If the temperature is too warm or too cold in the refrigerator or freezer, first check the air vents to be sure they are not blocked before adjusting the controls.

Temperature Setting

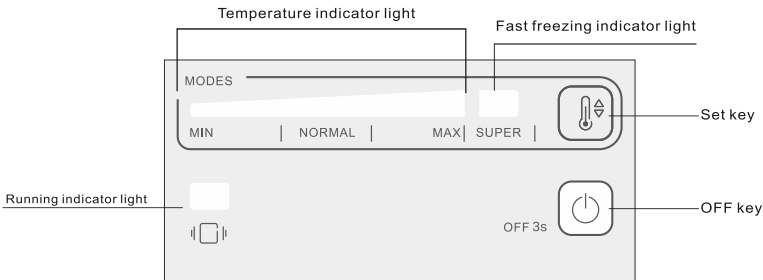

1.0 Electrical connection

When the appliance is plugged in, all LED indicator lights will flash once. Then the appliance will resume the mode previously set before the electrical outage.

2.0 Temperature Setting

- **Setting:** Press "SET" button, enter the temperature setting mode. The temperature indicator bar of temperature goes up a scale by each press. This setting runs in cycles. Temperature can run from Scale MIN to Scale MAX. Scale MAX is the coldest. The temperature is automatically set in 5 seconds after last press.
- **Super Freezing**
 - ✓ Press "SET" button consecutively to enter "SUPER" freezing mode from Scale MAX, the indicator bar on the left hereby will turn dark whereas the indicator light of "SUPER" turns on. This mode is automatically set in 5 seconds after last press.
 - ✓ The compressor keeps working in "SUPER" freezing mode.
 - ✓ If the "SUPER" mode keeps running for 52 hours and not stopped manually, the system will automatically cut out this mode, with the temperature back at Scale 5.

2.1 Power On & Power Off

If the appliance is working, press "ON/OFF" for 3 seconds to turn off.
If the appliance is off, press "ON/OFF" for 3 seconds to turn on.

3.0 Indicator Lights

- **Temperature Indicator Light (Bright Blue):** To adjust the temperature from Scale MIN to Scale MAX. MAX is the coldest.
- **Super Freezing Indicator Light (Bright Blue):** Light on = in "SUPER" mode; light off = exit "SUPER" mode.
- **Running Indicator Light (Bright Green):** Light on = compressor in work; light off = compressor stops.
- 30 minutes after the last operation, the indicator light will be on in half luminance.

4.0 Resumption Function

The appliance will automatically resume the mode previously set before the electrical outage.

5.0 Temperature Sensor Fault Alarm

When there is a disconnection or short out of the temperature sensor, as a fault alarm, the temperature indicator bar will flash from left to right every 0.5 second.

Cb]bY CfXYf]b[' bZfa Uhjcb

: cf XYfU]YX]bgtU'Uhjcb]bgtfU'Wjcb UbX' a U]bYbUbW']bZfa UhjcbZk]bYf' grefU[YZ UbX' fUbgdcfU]jcb']dgZ' dYUgY' gYY' hY' Ck bYffj' A Ubi U']bW XYX' k]h' nci f Udd']UbW"

: cf]bZfa Uhjcb cb UbmcZ hY Z' ck]b[]Y'a gZ U Z' ~' VwW' ei]XYZ k UffUbnZ XYfU]YX' dfcXi VhX]a Ybg]cbgZ cf Z'cf Vta d'Yf']bgtfU' Wjcbg Z'cf i gY' UbX']bgtU'UhjcbZ' d'YUgY' j]g]h' htdg ##k k k "k \]f dcc" Vta #ck bYfgZ' cf]b' 7 UbUXU' \ htdg ##k k k "k \]f dcc" Wjcb bYfg" h\]g' a Um gUj Y' nci ' hY' VtgicZU gYf]W' W' <ck Yj YfZ]Z' nci ' bYYX' hc' VtbUW' i gZ' i gY' hY']bZfa Uhjcb']gYX' W' ck Z'cf hY' UdcfccfU]Y' fY[]cb"

United States:
1-800-253-1301

Canada:
1-800-807-6777

Whirlpool Brand Home Appliances
Customer eXperience Center
553 Benson Road
Benton Harbor, MI 49022-2692

Whirlpool Brand Home Appliances
Customer eXperience Centre
200-6750 Century Ave.
Mississauga, Ontario L5N 0B7