


## BOOST DRYING POWER ON SELECTED CYCLE



### EXTRA POWER Option

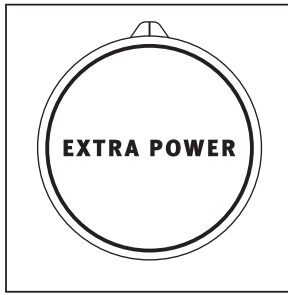





- Press the knob to select EXTRA POWER.
- Extra Power is active if the cycle control knob is illuminated. If activated after starting a cycle, additional time may not be automatically added.
- Press to boost drying power on any drying cycle by adding extending time, heat, and tumbling.

## CYCLE GUIDE



(Use sensor cycles for better fabric care and energy savings.)

The dryer senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level. The exact cycle times will vary, depending on load size and type.

Settings shown are default settings for that cycle. Once you select a cycle, the default modifiers or the previous set modifiers for that cycle will be shown in the Display LCD. For best fabric care, choose the cycle that best fits the load being dried. Not all cycles and options are available on all models. Please refer to garment label instructions for best care.



Items to dry:	Cycle:	Drying Temperature:	Dryness Level:	Available Options:	Cycle Details:
Heavyweight items such as towels or heavy work clothes	Heavy Duty	Ex Low Low <b>Medium</b> High	More <b>Normal</b> Less	Damp Dry Remote Start Cycle Signal Wrinkle Prevent Wrinkle Prevent with Steam Static Reduce Steam Pet Pro Extra Power	 Uses Medium High heat and longer cycle time to dry large loads of heavy weight, hard to dry items.
Work clothes, casual wear, mixed cottons, sheets, corduroys	Normal	Ex Low Low <b>Medium</b> High	More <b>Normal</b> Less	Damp Dry Remote Start Cycle Signal Wrinkle Prevent Wrinkle Prevent with Steam Static Reduce Steam Pet Pro Extra Power	 Uses Medium High heat to dry large loads of mixed fabrics and items. Use Normal cycle to increase energy savings versus Regular cycle by using a slightly lower heat level.
Undergarments, blouses, lingerie, performance wear	Delicates	<b>Ex Low</b> Low Medium High	More <b>Normal</b> Less	Damp Dry Remote Start Cycle Signal Wrinkle Prevent Wrinkle Prevent with Steam Static Reduce Steam Pet Pro Extra Power	 Uses lower heat to gently dry delicate items.
Large loads of heavyweight items	Sanitize	<b>High</b>	<b>More</b>	Remote Start Cycle Signal Wrinkle Prevent Extra Power	 This is a long cycle with High heat, which has been proven to reduce household bacteria. This cycle is not recommended for all fabrics. Use for large loads of heavyweight fabrics.
Jackets, comforters, pillows, jeans	Bulky Items	Ex Low Low <b>Medium</b> High	More <b>Normal</b> Less	Damp Dry Remote Start Cycle Signal Wrinkle Prevent Extra Power	 Use for drying large, bulky items; do not overfill dryer drum. Partway through the cycle, the signal will sound to indicate when it is time to rearrange items for optimal drying.
Shirts, blouses, permanent press, synthetics, lightweight items	Mixed Loads	Ex Low Low <b>Medium</b> High	More <b>Normal</b> Less	Damp Dry Remote Start Cycle Signal Wrinkle Prevent Extra Power	 Uses Medium High heat to dry large loads of mixed fabrics and items. When choosing between Mixed Loads and Normal cycle, for optimal energy savings, use Normal. For optimal time savings, use Mixed Loads.

## CYCLE GUIDE (cont.)

Items to dry:	Cycle:	Drying Temperature:	Dryness Level:	Available Options:	Cycle Details:
White, sturdy fabrics	Whites	Ex Low Low Medium <b>High</b>	More <b>Normal</b> Less	Damp Dry Remote Start Cycle Signal Wrinkle Prevent Extra Power	 Uses High heat to dry large loads of white, sturdy fabrics and items.
Large loads of cotton towels, heavyweight items	Towels	Ex Low Low Medium <b>High</b>	More <b>Normal</b> Less	Damp Dry Remote Start Cycle Signal Wrinkle Prevent Extra Power	 This is a long cycle with High heat. This cycle is not recommended for all fabrics. Use for large loads of heavyweight fabrics.


## CYCLE GUIDE - MANUAL CYCLES

**TIMED DRY** - It will run the dryer for the specified time on the control. Not all cycles and options are available on all models.

Items to dry:	Cycle:	Drying Temperature:	Available Options:	Cycle Details:
Any load <b>NOTE:</b> Select Air Dry to dry foam, rubber, plastic, or heat-sensitive fabrics	Timed Dry	Ex Low Low <b>Medium</b> High	Damp Dry Remote Start Cycle Signal Wrinkle Prevent Extra Power	 Use to dry items to a damp level for items that do not require an entire drying cycle. Select a drying temperature based on the type of fabrics in your load. If you are unsure of the temperature to select for a load, select the lower setting rather than the higher setting.
Small loads and sportswear	Quick Dry	Ex Low Low Medium <b>High</b>	Damp Dry Remote Start Cycle Signal Wrinkle Prevent Extra Power	 For small loads of 3–4 items.
Any Load	Air Only	-	Damp Dry Remote Start Cycle Signal Wrinkle Prevent	Use to dry items to a damp level for items that do not require an entire drying cycle. Use this cycle for items that might shrink when using heat.


## CYCLE GUIDE - STEAM REFRESH CYCLES (Steam models only)


Not all cycles and options are available on all models.


Items to refresh:	Cycle:	Drying Temperature:	Available Options:	Cycle Details:
Shirts, blouses, and slacks	Steam Refresh	High <b>Medium High</b>	Wrinkle Prevent Extra Power	 Use to reduce odors and light wrinkles. Do not add dryer sheets.

### Load Size Recommendations

For best results, follow the load size recommendations noted for each cycle.

 **Small load:** Fill the dryer drum with 3–4 items, not more than 1/4 full.

 **Medium load:** Fill the dryer drum up to about 1/2 full.

 **Large load:** Fill the dryer drum up to about 3/4 full. Do not pack tightly. Items need to tumble freely.

**NOTE:** These clothes dryer's Government energy certifications were based on the Timed Dry Cycle, Highest Temperature and Maximum Time. The as-shipped defaults of Normal, Medium Temperature and Wrinkle Prevent Off, Pet Pro and Extra Power Off where applicable were used. Cycles that are available for post-sale download may use more energy than the Normal cycle, upon which the energy use rating of this dryer is based upon.

Cycles that are available for post-sale download may use more energy than the Normal cycle, upon which the energy use rating of this dryer is based.

## DRYER ICONS





















Image	Description	Status
	Remote Enable	On
		Off
	Steam	On
	Reduce Static	On
	Reduce Static & Steam	On
	Drum Light	On
		Off
	Smartgrid, Peak rates in effect	On
		Smart Delay
		Smart Pause

Image	Description	Status
	WiFi Status Indicator	Connected
	<b>*NOTE:</b> When the WiFi is disconnected, the priority goes to the first, then as other options added, it goes to the least again.	Disconnected
	Custom Cycle	
	Download & Go Cycle	
	Cycle Signal	Low
		Medium
		High
		Off
	Damp Dry Signal	On
		Off